

## IMPORTANT

This mic must be assigned to the same channel number as either Channel A or B on your Portable Amplification System Tower. To avoid interference, make sure to use a channel number that is not already in use in any nearby classrooms.

Teacher Mic



Student Mic



## Step 1

Press and hold **SET** button for 2 seconds, then use the +/- buttons to adjust channel number. Press **SET** again when finished.

Press and hold dial at bottom for 2 seconds, then toggle up or down to adjust channel number. Press the dial again when finished.

## Step 2

Press and hold **SET** button for 2 seconds. Channel A will flash. If assigning the mic to Channel B press **SET** again to select Channel B. Use the ▲ and ▼ buttons to adjust channel number. Press **SET** again when finished. Don't forget to turn on the Channel volume (suggested default level 7) for the newly assigned mic.



**Tip:** If you need to find an open channel, press both the ▲ and ▼ together for 1 second to SCAN for an available channel.