


ANCHOR AUDIO FREQUENCY CHART

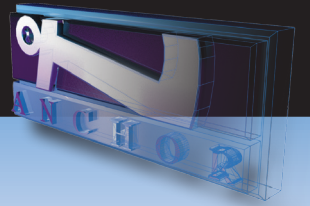

American - 16 Channel UHF			
540-570 MHz			
CHANNEL 1	540.125MHz	CHANNEL 9	555.625MHz
CHANNEL 2	540.825MHz	CHANNEL 10	561.125MHz
CHANNEL 3	541.925MHz	CHANNEL 11	563.225MHz
CHANNEL 4	545.025MHz	CHANNEL 12	564.125MHz
CHANNEL 5	545.925MHz	CHANNEL 13	564.825MHz
CHANNEL 6	549.425MHz	CHANNEL 14	565.725MHz
CHANNEL 7	552.325MHz	CHANNEL 15	567.825MHz
CHANNEL 8	554.225MHz	CHANNEL 16	569.525MHz

European - 16 Channel UHF			
863-865 MHz			
CHANNEL 1	863.125MHz	CHANNEL 9	863.250MHz
CHANNEL 2	863.375MHz	CHANNEL 10	863.500MHz
CHANNEL 3	863.625MHz	CHANNEL 11	863.750MHz
CHANNEL 4	864.000MHz	CHANNEL 12	863.875MHz
CHANNEL 5	864.250MHz	CHANNEL 13	864.125MHz
CHANNEL 6	864.500MHz	CHANNEL 14	864.375MHz
CHANNEL 7	864.750MHz	CHANNEL 15	864.625MHz
CHANNEL 8	864.875MHz	CHANNEL 16	864.875MHz

